1. Unfold the 3-parted pole.

2. Insert the pole onto the cup of the base.

3. Pull up the panel and position the plastic end tip of the pole into the top profile.

1. Attach the top of graphic onto the panel strip by removing each time a few inches of the protective liner of the tape.

2. Align the graphic with the strip and press the graphic firmly on the strip.

3. Repeat the above steps at the back of the graphic with security tape. Press firmly.
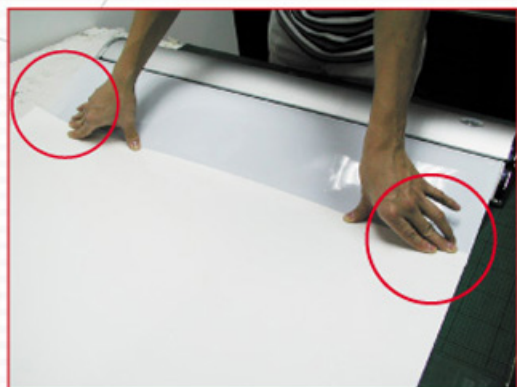
4. Slide the graphic into the top profile and secure with a piece of tape.

TAPE

Scroll

5. Attach the bottom of the graphic by aligning it with the adhesive tape on the white PVC.

6. Press the graphic firmly and apply extra tape for reinforcement.

7. Hold the graphic while removing the key to let the panel retract. Let the graphic rolls into the base slowly.